


INSTALLATION INSTRUCTIONS MARSHALLS RT\R5, RT\R8, RT\SQ5 AND RT\SQ8 TELESCOPIC SECURITY POSTS

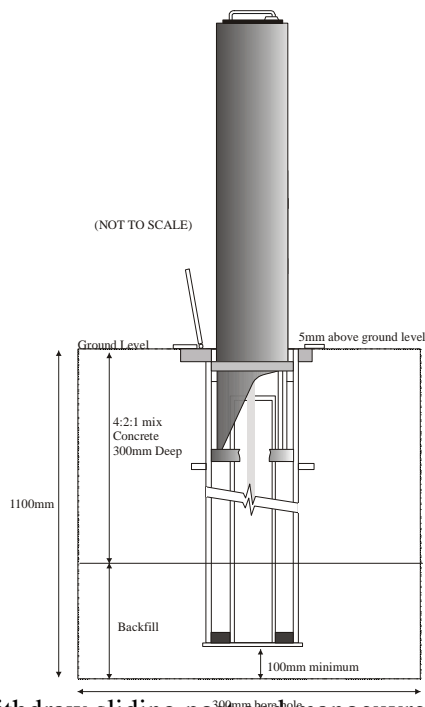

Determine position of installation. Recommended distance between centres: 1250mm, maximum 1400mm.

Break surface and bore hole 1100mm deep by 300mm diameter.

Fill hole with approx. 100mm of suitable aggregate eg; 15mm stone.

Lower post into hole and check height.

Add or remove aggregate until desired height is obtained.

Position post central in bore hole and add more chippings until post stands unaided.

Withdraw sliding post and manoeuvre into vertical position using a spirit level.

Add more backfill until approximately 300mm from surface.

Fill remainder of hole with 4:2:1 concrete mix and smooth off neatly to lid surround, leaving slight fall away. Groundworks variable depending on site conditions.

Finally check again using a spirit level and retract post gently into ground and lock.

Leave for 24 hours before operating.

Keep upper post clean during fitting procedure.

When lowering post do so in controlled manner. Do not allow it to free-fall down into base.

Groundworks variable depending on site conditions.

Maintenance

Keep Sliding Post clean.

Flush out and lubricate lock with WD40 or similar weekly.

Always close cover plate after use.

WARNING

FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY CAUSE MALFUNCTION OF THE POST AND INVALIDATION OF YOUR WARRANTY. PLEASE ADHERE TO THEM.

SALES OFFICE:

Marshalls Street Furniture, Adlington Estate, Adlington, Cheshire SK10 4NL

Tel: 0870 6002425 Fax: 0870 6002426